

# THE NEW "SRT"

## STUD REMOVAL TOOL

For use on STEEL BODIED Passenger/Light Truck STUDS  
Works on both NEW & USED studs  
Comes with Replaceable Hardened Tip



### How to use

With the tire either aired-up on a rim, or mounted on a studding stand, simply follow these steps:

- Push hollow tip of tool down over stud body as far as it will go.
- Tilt tool back and down towards tire, using fulcrum to pull stud free of tire.
- Remove stud from tool and repeat.



BRUNO WESSEL