


“SRT” - Instructions & Replaceable Parts

The SRT comes supplied with a 5mm Tip, for use on all STEEL (Passenger / Light Truck) TIRE STUDS
TSMI Sizes 11 through 17

Instructions

With the tire either aired-up on a rim, or mounted on a studding stand, simply follow these steps:

- 1) Push hollow tip of tool down over stud body as far as it will go.

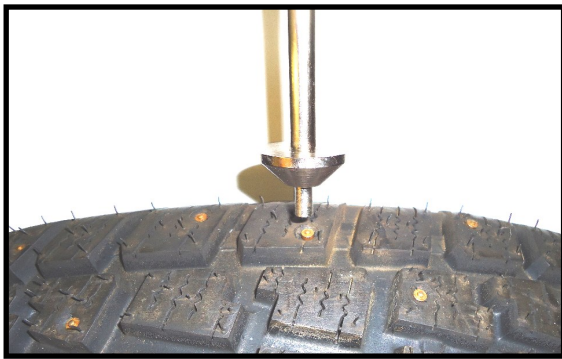

- 2) Tilt tool back towards tire, using fulcrum to pull stud free of tire.



- 3) Remove stud from tool and repeat.

“SRT”



BRUNO WESSEL

Replaceable Parts

1) **STP 0011** FULCRUM



2) **STP 0013** 5mm TIP



BRUNO WESSEL manufactures a wide variety of
Tire Studding Equipment.



Please visit our WEB SITE at www.brunowessel.com
or call us to find your closest distributor.

USA

1-800-869-1908

CANADA

1-877-452-1935