



<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
0084	SPREAD FINGER	x 3
0088	O-RING (Piston)	x 2
0092	PISTON CUP (Large)	x 1
0103	SPRING-RING (Head)	x 2
0126	INSERTING FINGER	x 6
0136	O-RING (Feed Tube)	x 1