

TETHERED PIG

OPERATING INSTRUCTIONS

1. Roll the unit near the tires to be checked.
2. Install a hose chuck on each tire to be checked.
3. Observe the tire pressure on the gauge for each tire.
4. **WARNING: Any tire with less than 80% of it's rated air pressure must be removed and checked by specially trained personnel before inflating.**
5. Adjust the regulator pressure (viewed on the center gauge) to the tire manufacturers recommended operating pressure.
6. Turn on the switch for each tire to be equalized.
7. With the switch in the up position, the tires are being equalized. After a period of time the tires will be equalized to the pressure on the center gauge. To confirm that all tires are at the same pressure, turn the switches to the down position and read each gauge.
8. Once all tires are equalized, remove each hose chuck and replace the valve caps.

DO NOT use this unit to add air to any tire that has been operated with less than 80% of it's rated operating pressure.

DO NOT use this unit to inflate a tire that has just been mounted on a rim.

DO NOT use this unit to add air to any tire or wheel that appears to be damaged.

DO NOT remain in front of the tire except to install or remove the hose chucks.

DO NOT inflate a tire until you have been fully trained.

DO NOT inflate a tire above the tire manufacturer's rated operating pressure.

OBSERVE all regulations and industry procedures, specifically those regarding proper tire inflation, when using this unit.

ALWAYS wear eye protection.

